


Clean Sense Bidet “Quick Start” Installation Instructions

We recommend reading the manual thoroughly before installing, but if you’re like us, you just want to get started, we get that!

1. Shut off the water to the toilet.
2. Flush the tank until the water stops running.
3. Remove old toilet seat and unscrew the hose only at the bottom of the toilet.
4. Install the ‘T’ valve onto the toilet. Note that the pictures in the booklet might be incorrect. We now supply a plastic top hand tight 7/8” T without spare nut that secures **directly to the bottom of the toilet**. Because of this better installation, the new water feed hose (for toilet) and spare nut are not needed. Install the existing toilet water feed hose onto the bottom of the new T valve.

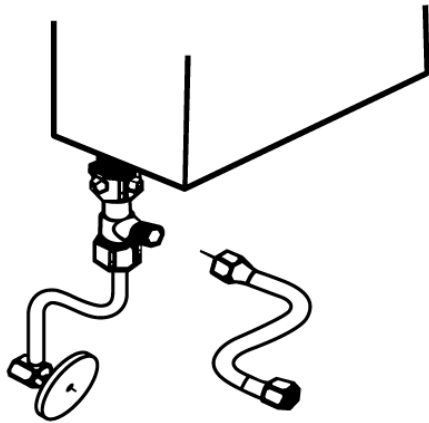

5. Install the new bidet seat hose to the T valve.
6. Fasten your new bidet seat to the toilet and attach the water line to it.
7. Turn on the water and check for leaks.
8. Plug the bidet seat into a GFCI protected outlet - 15/20 amp minimum circuit.
9. The seat will initialize in 10-20 seconds.
10. To test seat properly it must detect skin contact so you need to be sitting on the seat completely for this product to work.

--- IMPORTANT ---

Make sure the bidet seat is *pushed all the way back and firmly attached to the bracket* or the drain valve will be activated and the water will continue to run. Every bidet seat is water tested on the assembly line and water may be present when installing. On the remote control models, please read instructions for using the side panel such as manual cleaning, re-initializing as well as other features.

If you have any questions please contact us at 1-360-565-5418 or

www.clearwaterbidets.com